



SPORT COURT


Alberta

General Installation Guide for all Sport Court Floor Tiles

GENERAL INFORMATION


All tiles in any given installation should ALWAYS HAVE THE FEMALE LOOPS GOING IN THE SAME DIRECTION. (See diagrams below).

Diagram #1

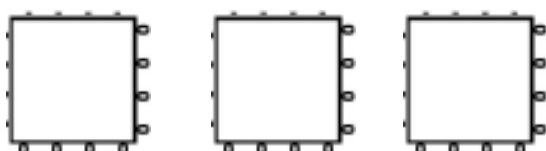

RIGHT


Diagram #2

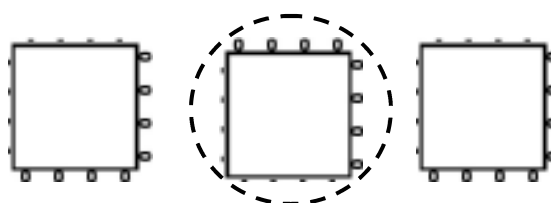


WRONG

ASSEMBLY

Always start installation in one corner and point female loops in both the directions that additional tiles are to be added.

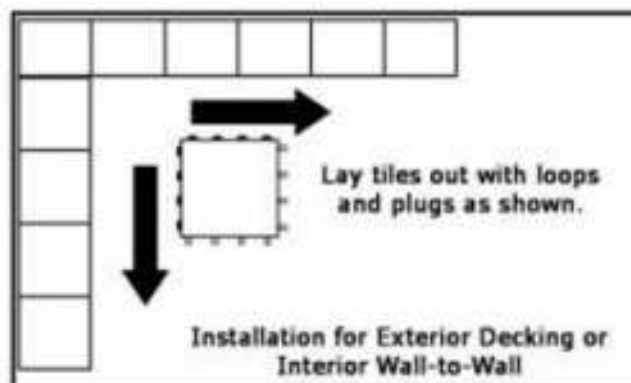

NOTE: When laying tiles, always install the MALE PLUG on top of the FEMALE LOOP. If you attempt to install the tiles by sliding the loop UNDER the plug it will be very time consuming.

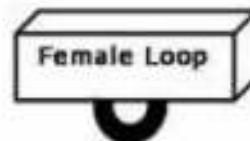

200 - 3605 Manchester Rd. SE, Calgary, AB T2G 3Z7
 Tel: (403)-287-0466 sportcourt@telusplanet.net

Visit our website at: www.sportcourtalberta.com




SPORT COURT

Alberta

POOLS & SPAS

Start by doing one row lengthwise and one row widthwise to establish fit. Make the adjustments desired before continuing. This method will necessitate the need to lift some tiles to slide female loops underneath.

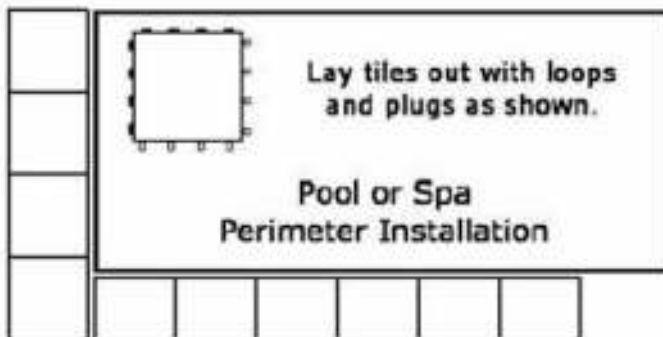

INDOOR & OUTDOOR FITTING TIPS

Outdoor: Enough room must be allowed for expansion/contraction. Tiles that come in contact with an immovable object will cause them to "bunch up" or "buckle" during expansion. Trim enough space around objects to allow for the tiles to expand in hot weather.

INDOOR: Where there is not significant temperature variance trimming can be done with closer tolerances. Due to the design of the tiles it is much neater to cut squares than circles.

TRIMMING

It is recommended that the female loops be trimmed off the border tiles of a completed installation for appearances (unless additional tiles are to be added later). Trim tiles so that the cut is flush with the grid line. Do not cut a tile through the drainage spaces as this will leave a jagged edge.

200 - 3605 Manchester Rd. SE, Calgary, AB T2G 3Z7
Tel: (403)-287-0466 sportcourt@telusplanet.net

Visit our website at: www.sportcourtalberta.com



SPORT COURT

Alberta

EDGING

Tiles can be finished off with strips of 2" wide beveled edges. These are not generally necessary to use but they provide a finished edge look. They are limited in colour choice to black, grey, sand (med. brown), and beige (Lt. brown). Planning an installation should take into account the 2" width of the edges if they are to be used.



FASTENING OR ANCHORING

In most cases fastening or anchoring is NOT REQUIRED. Exceptions to this rule are areas that have too much slope, or small areas like stair treads. Contact us for further details.

TOOLS NEEDED

Only two basic tools are need to install or remove the tiles. They are a putty knife and utility razor knife (see photos below).



200 - 3605 Manchester Rd. SE, Calgary, AB T2G 3Z7
Tel: (403)-287-0466 sportcourt@telusplanet.net

Visit our website at: www.sportcourtalberta.com